

Software - Release Notes
Runner-4 / Runner-8
New Software Version 9.08

1. P200E Option 14: RSSI Present

At this mode the control Panel present the RSSI of assigned wireless detectors and remotes.

Supported by: Receiver ver 3.7 and Keypad ver 2.10.

2. P73E 1-8E Option 7: Turn off Backlight after 10Sec and LEDs indication at Arm mode

3. At Disarm Mode the activating the System Tamper or Zone Tamper will not activate Output 1&2.

4. P25E 13E option 7: Enable Keypad Tamper.

Keypad Tamper is disabling by Default.

5. P122E Option 3: Not an Exit Delay Zone.

Instant Zone cause an alarm when trigger during exit delay.

6. P25E 3E 0-255: Dialer Report Delay

The dialer report is delayed if during Exit delay an Instant Zone activated.

7. P36E 5E: Disable Outputs 1&2 during dial Delay.

8. Exit from Walk Test Mode will stay in Programming mode.

9. While learning wireless devices a messages "Code In Use" and "Not Found" accordingly.

10. From the main display Pressing Enter will present the open zones, pressing Enter again will present the open zones by name.

11. Listen-In time extended to 3min.

12. Beeps from Keypad turn off during the Listen -In.

13. Report in Stay mode also at Voice Mode.

14. Default Changes:

P4E 1-100E : USER CODE ACCESS OPTIONS

User 1-20 = 1, 3, 4

User 21,26,31,36 = 1

User 22,27,32,37 = 3, 4

User 23,28,33,38 = 2

User 24,29,34,39 = (Delay Panic – see P8E)

User 25,30,35,40 = None (Not In Use)

User 41-100 = 1, 3, 4

1. Code can Arm Area
2. Code can arm Stay Mode
3. Code can Disarm Area
4. Code can disarm Stay Mode

P8E 21-100E: RADIO USER PRIVILEGES

User 21,26,31,36 = None

User 22,27,32,37 = 1

User 23,28,33,38 = None

User 24,29,34,39 = 3

User 25,30,35,40 = None

User 41-100 = 1

1. Pendant Can Disarm at All Times
2. Pendant Causes Immediate Panic
3. Pendant Causes Delayed Panic (1.5 Sec)

P25 10E 2, 6 –ON

Panel Tamper is Short Circuit.

2. Direct access to program mode for the installer code
6. Send output information to keypad BUS.

P182E 1-8E

Telephone No 1, 2 = 1

Telephone No 3-8 = 2

1. Contact ID
2. Domestic Dial

Software - Release Notes
Runner-4 / Runner-8
New Software Version 9.08

1. P200E Option 14: RSSI Present

At this mode the control Panel present the RSSI of assigned wireless detectors and remotes.

Supported by: Receiver ver 3.7 and Keypad ver 2.10.

2. P73E 1-8E Option 7: Turn off Backlight after 10Sec and LEDs indication at Arm mode

3. At Disarm Mode the activating the System Tamper or Zone Tamper will not activate Output 1&2.

4. P25E 13E option 7: Enable Keypad Tamper.

Keypad Tamper is disabling by Default.

5. P122E Option 3: Not an Exit Delay Zone.

Instant Zone cause an alarm when trigger during exit delay.

6. P25E 3E 0-255: Dialer Report Delay

The dialer report is delayed if during Exit delay an Instant Zone activated.

7. P36E 5E: Disable Outputs 1&2 during dial Delay.

8. Exit from Walk Test Mode will stay in Programming mode.

9. While learning wireless devices a messages "Code In Use" and "Not Found" accordingly.

10. From the main display Pressing Enter will present the open zones, pressing Enter again will present the open zones by name.

11. Listen-In time extended to 3min.

12. Beeps from Keypad turn off during the Listen -In.

13. Report in Stay mode also at Voice Mode.

14. Default Changes:

P4E 1-100E : USER CODE ACCESS OPTIONS

User 1-20 = 1, 3, 4

User 21,26,31,36 = 1

User 22,27,32,37 = 3,4

User 23,28,33,38 = 2

User 24,29,34,39 = (Delay Panic – see P8E)

User 25,30,35,40 = None (Not In Use)

User 41-100 = 1, 3, 4

1. Code can Arm Area
2. Code can arm Stay Mode
3. Code can Disarm Area
4. Code can disarm Stay Mode

P8E 21-100E: RADIO USER PRIVILEGES

User 21,26,31,36 = None

User 22,27,32,37 = 1

User 23,28,33,38 = None

User 24,29,34,39 = 3

User 25,30,35,40 = None

User 41-100 = 1

1. Pendant Can Disarm at All Times
2. Pendant Causes Immediate Panic
3. Pendant Causes Delayed Panic (1.5 Sec)

P25 10E 2, 6 –ON

Panel Tamper is Short Circuit.

2. Direct access to program mode for the installer code
6. Send output information to keypad BUS.

P182E 1-8E

Telephone No 1, 2 = 1

Telephone No 3-8 = 2

1. Contact ID
2. Domestic Dial