 



CHIME-IP

WIRELESS CHIME BOX

QUICK GUIDE

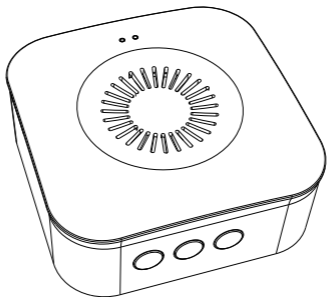

 Product Overview

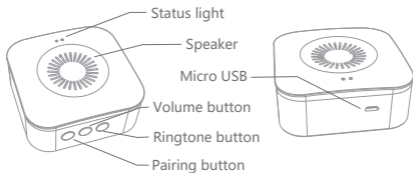

Pairing button: Press "⚙️" for 5s to restore **Factory Settings**;
Click the "⚙️" button(1~2 second) to pair the doorbell



Volume button: Click "🔊" button to adjust volume, and continuously click to adjust the volume in a loop




Ringtone button: Click "🔔" button to switch ringtone; you could choose one among the four ringtones

Ring volume	≥80dB
Micro USB	DC5V±10%
Working temp. (Transmittle)	-20C°~50C°
Standby consumption	<10μW
Work consumption	<100mA

Pairing and Operation

 1. Short press "🔊" (within 2 seconds), the status light flashes red slowly and the CHIME-IP will be in pairing mode;

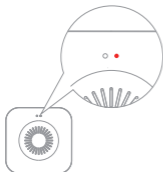


During pairing mode, it will blink red

2. Press the doorbell button to pair, when the jingle status light turns off, and the song will play automatically, the jingle pairing is successful at this time

Description:

1. The CHIME-IP can connect to maximum eight doorbells
2. When the device is in pairing mode, press the "🔊" again (within 2 seconds), the device will automatically exit the pairing mode
3. After adding the device successfully, the volume will be adjusted to the maximum automatically. When it is at the minimum volume, it will return to the maximum volume after pressing "🔊"
4. Each press "🎵", will play the next song along with blinking blue light

 When playing ringtone, it will blink blue

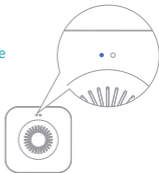

support@crow.co.il

www.thecrowgroup.com